

THANK YOU FOR CHOOSING A WHIRLPOOL PRODUCT.



To obtain the most complete after-sales service possible, please register your appliance at www.whirlpool.eu/register




Read the instructions carefully before using the appliance.

Remove the transport pallet before using the machine.

For more detailed instructions on how to remove it, see the Installation Guide.

CONTROL PANEL

- 1 Programme knob
- 2 "Start/Pause" button
- 3 "Cancel/Drain" button
- 4 "Delayed start" button
- 5 Key lock combination — 3 sec
- 6 "Spin" button
- 7 Time display
- 8 Wash phase

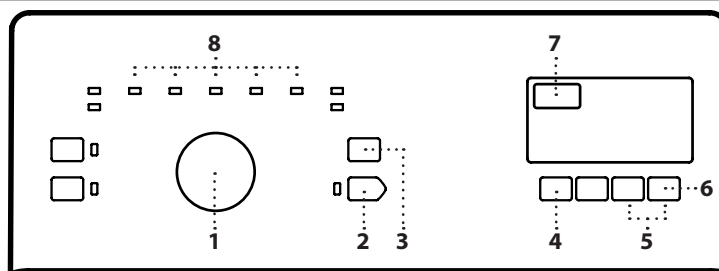

INDICATOR LIGHTS

Open door

Error: Service

Error: Clean filter

Error: Water supply off

In the event of a malfunction, see the "TROUBLESHOOTING" section

PROGRAMME TABLE

Maximum load 6.0 Kg Power consumption in Off-mode 0,11 W / in Standby-mode 0,11 W						Detergents and additives			Recommended detergent		Residual moisture % *	Power consumption (kWh)	Total litres of water	Wash temperature °C
Programme	Temperature		Max. spin speed (rpm)	Max load (kg)	Programme time (h : m)	Pre-wash	Main wash	Fabric conditioner	Powder	Liquid				
	Setting	Range				I	II							
Cotton	60°C	40 - 95°C	1200	6.0	3:00	● (95°)	●	○	✓	✓	57	1.20	48	55
Rapid 30'	30°C	30°C	1200	3.0	0:30		●	○	—	✓	57	0.25	42	27
Magic	40°C	40°C	1200	3.0	**		●	○	✓	✓	—	—	—	—
Anti Stain	20°C	20°C	1200	4.0	**		●	○	✓	✓	—	—	—	—
Synthetics	40°C	40°C	1200	3.0	1:50		●	○	✓	✓	40	0.56	50	40
Rinse & spin	—	—	1200	6.0	—		—	○	—	—	—	—	—	—
Spin	—	—	1200	6.0	—		—	—	—	—	—	—	—	—
Wool	20°C	20°C	1000	1.0	**		●	○	—	✓	—	—	—	—
Delicate	30°C	30°C	1000	1.5	**		●	○	—	✓	—	—	—	—
Colours	40°C	40°C	1000	4.0	**		●	○	✓	—	—	—	—	—
20°C	20°C	20°C	1200	6.0	2:30		●	○	—	✓	53	0.25	46	20
Eco 40-60	40°C	40°C	1151	6.0	3:15		●	○	✓	✓	52	0.89	53	43
			1151	3.0	2:30		●	○	✓	✓	53	0.51	37	32
			1151	1.5	1:50		●	○	✓	✓	55	0.35	31	31
Eco Cotton	60°C	60°C	1200	6.0	3:30		●	○	✓	✓	53	0.70	46	—
				3.0	2:45		●	○	✓	✓	53	0.64	32	—
			1200	3.0	2:00		●	○	✓	✓	53	0.47	32	—

● Dosing required ○ Dosing optional

Eco cotton - test wash cycle in compliance with Regulation 1061/2010. Select the "Cotton 40 °C" or "Cotton 60°C" wash cycle with the "Energy saver" option to access this cycle.

Eco 40-60 - Test wash cycle in compliance with Regulation 2019/2014. The most energy and water efficient programme for washing moderately soiled cotton items. Display only; the spin speed values shown on the display may differ slightly from those indicated in the table.

For all Test Institutes

Long wash cycle for cotton items: set the 40° Cotton wash cycle.

Synthetics programme: set the 40°C Synthetics wash cycle.

These values may vary with changes in incoming water temperature, water pressure, etc. The approximative programme time values refer to default programme settings without optional settings. The values indicated for all programmes other than the Eco 40-60 programme are merely provided as a guide.


* After the end of the programme and using the maximum spin speed possible, default programme setting.

** The programme time is shown on the display.

Sensor technology adjusts water, power and programme time to your wash load.

DESCRIPTION OF THE PRODUCT

1. Lid handle
2. Lid
3. Control panel
4. Detergent dispenser
5. Drum
6. Water filter - behind lid
7. Mobility lever (depending on model)
8. Adjustable feet (x2)

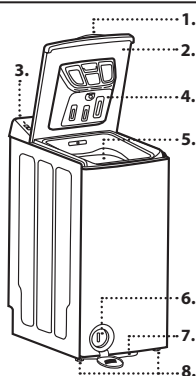

DETERGENT DISPENSER

Main wash compartment II

Detergent for main wash, stain remover or water softener.

Pre-wash compartment I

Pre-wash detergent.


Fabric conditioner compartment

Fabric conditioner. Liquid starch. Bleach.

When pouring in fabric conditioner, starch solution or bleach, do not exceed the "MAX" mark.

Release button

Press to remove the detergent dispenser and for cleaning.

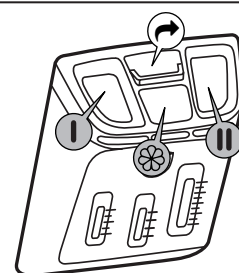

PROGRAMMES

Follow the label instructions to choose the most suitable programme. The value shown in the basin symbol is the maximum temperature that can be used to wash the garment.



Cotton

For washing moderately to very soiled resistant cotton or linen towels, underwear, tablecloths, sheets, etc. The cycle only includes a pre-wash before the main wash if the wash temperature is set to 95°C. In this case, detergent should be placed in both the pre-wash and the main wash compartments.

Rapid 30'

Cotton, polyamide and cotton mix garments only worn for a short time. A short programme to refresh your laundry.

Magic

For washing slightly to moderately soiled resistant cotton, linen, synthetic and mixed fabric garments.

Anti Stain

This programme guarantees maximum stain-removing power without requiring low-temperature pre-treatment, helping to protect fabrics and colours.

Synthetics

For washing soiled synthetic garments (such as polyester, polyacrylic, viscose, etc.) or cotton-synthetic mix fabrics.

Rinse & spin

Separate intensive rinse and spin programmes. For resistant fabrics.

Spin

Spins the load and drains the water. For resistant fabrics.

Wool

All wool garments can be washed using the "Wool" programme, even those with a "Hand wash only" label. For best results, use specific detergents and **do not exceed the maximum load**.

Delicate

For washing particularly delicate garments. For best results, turn garments inside out before washing.

Colours

White and light-coloured garments in delicate fabrics. Delicate wash programme that prevents greying and yellowing. Use a strong detergent, adding a stain remover or oxygen-based whitening solution if necessary. Do not use liquid detergent.

20 °C

Ideal for washing slightly soiled cotton garments at a temperature of 20°C.

Eco 40-60

Ideal for washing moderately soiled cotton garments indicated as suitable for 40°C or 60°C washes, even in the same cycle. This is both the standard cycle for washing cotton garments and the most efficient cycle in terms of water and power consumption.

Eco Cotton

Ideal for washing moderately soiled cotton garments. At 40°C and 60°C.

FIRST USE

To remove any manufacturing debris, select the "Cotton" programme and set the temperature to 95°C. Pour a small amount of powder detergent in the **II** main wash compartment of the detergent dispenser (no more than 1/3 of the amount of detergent recommended by the manufacturer for slightly soiled laundry). Start the programme **without adding laundry**.

EVERYDAY USE

Prepare your laundry as recommended in the "TIPS AND TRICKS" section. Load the laundry, close the drum door and make sure it is closed properly. Pour in the detergent and any additives. Use the doses recommended on the detergent pack. Close the lid. Turn the programme knob to the required programme and select any other option required. The display will show the duration of the selected programme (in hours and minutes) and the "Start/Pause" button will flash. The indicator light for the preset spin speed will come on. Press the "Spin" button to change the spin speed. Turn on the tap and press the "Start/Pause" button to start the wash cycle. The "Start/Pause" indicator light will come on and the door will be blocked. The remaining time will be recalculated during certain programme phases in accordance with variations in the load and the temperature of the incoming water. In this case,   , an animated icon will appear on the display.

INTERRUPTING OR MODIFYING A PROGRAMME IN PROGRESS

To interrupt a wash cycle, press the "Start/Pause" button; the indicator light will start to flash. Select the new programme, the options or the spin speed if you wish to change these settings. Press the "Start/Pause" button again to start the wash cycle from the point at which it was paused. Do not add detergent for this programme.

OPENING THE DOOR

Once the programme has started, the indicator light will flash, indicating that it is not possible to open the cover. Whilst a wash programme is running, the lid will remain locked and it must not be forced under any circumstances. If you urgently need to open it when a programme is in progress, for example to add more laundry or to remove laundry that was loaded by mistake, press the "Start/Pause" button. Provided the temperature is not too high, the "Door opening" indicator light will come on. You will have to wait a while before being able to open the lid. Press the "Start/Pause" key to continue the programme.

END OF THE PROGRAMME

The "Open door" indicator light will go off and **End** will appear on the display.

Turn the programme knob to the "OFF" position and close the water tap. Open the lid and drum and unload the machine. Leave the lid open for a while to allow the inside of the machine to dry. After about a quarter of an hour, the washing machine will switch off completely to save energy. To cancel a programme in progress before the end of the cycle, hold the "Cancel/Drain" button down for at least 3 seconds. The water will be drained. You will have to wait a while before being able to open the lid.

OPTIONS

! When the programme + additional option combination cannot be selected, the indicator lights will go off automatically.

! Unusual option combinations are automatically deselected.

Rapid

Allows faster drying, and therefore shortens the programme time. Recommended for small loads or slightly soiled laundry only.

Fresh Care

Use this option if you are unable to unload your laundry immediately after the end of the programme or if you tend to forget laundry in your washing machine. It will help keep your laundry fresh. The washing machine will rotate the laundry at regular intervals after the end of the programme. The "Fresh Care" button indicator light will flash while this function is active and an animated icon will appear on the display. The drum will rotate periodically for about 6 hours after the end of the wash programme and you may stop it at any time by pressing the "Fresh Care" button. You will have to wait a while before being able to open the lid. Once the "Fresh Care" time has expired, **End** will appear on the display.

Delayed start

To set the selected programme so that it starts at a later time, press the "Delayed Start" button to set the desired delay time. The "Delayed start" button indicator light will come on and will switch off when the programme starts. Press the "Start/Pause" button to start the countdown. The pre-set time can be reduced by pressing the "Delayed start" button again. **Do not use liquid detergent when using this option.** To cancel the "Delayed start", turn to programme knob to another position.

Energy saver

Allows faster drying, and therefore shortens the programme time. Recommended for small loads or slightly soiled laundry only.

Rinse plus

Helps to remove all detergent residues from the laundry by prolonging the rinse phase. It is ideal for washing baby clothes, for people with allergies and for hard water areas.

Spin

Each programme has a pre-set spin speed. Press the button to set a different spin speed. The indicator light of the pre-set spin speed will come on. If you select the "0" spin speed, the final spin will be cancelled and the water will simply be drained. The intermediate spin phases during the rinse will nevertheless be carried out.

KEY LOCK = 3 sec

The buttons on the control panel can be locked to prevent tampering (for example, by children). Press the key lock buttons together and hold down for at least 3 seconds. The key symbol  on the display will come on. Repeat the operation to release the buttons.

BLEACH

Wash your laundry using the preferred Cotton or Synthetics programme, adding the appropriate amount of bleach to the Fabric conditioner compartment  (making sure the lid is firmly closed). Immediately after the end of the programme, turn the "Programme knob" and start the desired programme to eliminate any residual bleach odour; fabric conditioner can be added if preferred. **Never add bleach and fabric conditioner to the fabric conditioner compartment at the same time.**

TIPS AND TRICKS

Sort your laundry according to:

The type of fabric/care label instructions (cottons, mixed fabrics, synthetics, wool, items to be hand-washed). Colours (separate the coloured items from the whites and wash new colour items separately). Delicates (wash small items - like nylon hosiery - and items with hooks - like bras - in a zip-up fabric bag or pillowcase).

Empty all pockets

Objects like coins and lighters may damage your laundry and the drum.

Inside of the appliance

If you never or rarely wash laundry at 90%, we recommend you run a 90°C programme without any laundry once in a while, adding a small amount of detergent, in order to keep your washing machine clean.

Follow dosing/additive instructions

This will allow you to get the best results from the wash, avoid tiresome detergent residues in your laundry and save money by avoiding unnecessary wasting of detergent.

Use a low temperature and a longer wash

The most energy-efficient programmes are usually those with a lower temperature and a longer wash time.

Observe the load weight

Load your washing machine to the capacity indicated in the "PROGRAMME TABLE" in order to save water and electricity.

Noise levels and residual water content

These depend on the spin speed: the higher the spin speed, the higher the noise level and the lower the residual water content.

MAINTENANCE AND CLEANING

Switch off and disconnect your washing machine before cleaning and maintenance operations. Do not use flammable fluids to clean the washing machine. Clean and perform maintenance on your washing machine every now and then (at least 4 times a year).

Clean the outside of the washing machine

Use a soft wet cloth to clean the outside of the washing machine. To not use a glass cleaner, all-purpose cleaner scouring powder or similar cleaning products to clean the control panel, as this type of product will damage the display.

Detergent dispenser

Clean the detergent dispenser regularly, at least three or four times a year, to avoid detergent residue build-ups:

Press the release button  to release the detergent dispenser and remove it. There may be a small amount of water in the dispenser, if so turn it upright. Wash the dispenser under running water. You may also remove the cover of the trap at the back of the dispenser in order to clean it. Put the cover back on the dispenser (if removed). Replace the dispenser, fitting the tabs on the bottom of the dispenser into the corresponding recesses on the lid and press the dispenser against the lid until it locks into place. **Make sure that the detergent dispenser is installed correctly.**

Checking the water supply pipe

Check the water supply pipe regularly for cracks and wear. If damaged, replace it with a new hose from our after-sales service or an authorised stockist. Depending on the type of pipe: If the pipe has a colourless coating, check it regularly to make sure it has not changed colour. If it has, the pipe may have a leak should be replaced. For water stop pipes  (where available): check the inspection window on the small safety valve (see arrow). If it is red, the water stop function has released and the pipe must be replaced. To unscrew the pipe, press the release button (where available) while unscrewing the pipe.

Cleaning the water supply pipe mesh filters

Check and clean regularly (at least two or three times a year).

Close the tap and detach the inlet pipe from the tap. Clean the inner mesh filter and fit the water supply pipe back on the tap. Now loosen the water supply pipe at the back of the washing machine. Pull out the mesh filter on the washing machine connector using universal pliers and clean. Fit the mesh filter back in place again and tighten the water supply pipe again. Open the tap again and make sure that the connections are perfectly water-tight.

Cleaning the water filter/ draining the waste water

The washing machine is provided with a self-cleaning pump. The filter traps objects such as buttons, coins, safety pins, etc. that were left in the laundry. After using a high-temperature programme, wait for the water to cool before draining. Clean the water filter regularly to avoid water drainage problems due to a blocked filter. If the water is unable to drain, the display will indicate that the water filter may be blocked.


Open the filter lid using a coin. Place a large, flat container under the water filter to collect the drained water. Slowly turn the filter anti-clockwise to allow the water to drain. Allow the water to drain without removing the filter. When the container is full, close the filter by turning it clockwise. Empty the container. Repeat the operation until all the water has been drained. Your washing machine is provided with a number of safety and automatic feedback features. Then remove the filter by turning it anti-clockwise. Clean the water filter (remove any residues inside the filter and clean under running water) and the filter chamber. Make sure that the pump propeller (in the recess behind the filter) is not clogged. Insert the water filter and close the filter cover. Before opening the door as described in the section below, see the instructions for the malfunction "The door is locked, with or without a malfunction indication, and the programme is not running". Be sure to turn it as far as it will go. To make sure the water filter is water-tight, pour approximately 1 litre of water into the drum and check that no water leaks from the filter. Then close the filter lid.

Lid seal

Check the lid seal regularly and clean it with a damp cloth from time to time.

Retrieving an object that has fallen between the drum and the casing

If an object accidentally falls between the drum and the casing, it can be retrieved using one of the removable drum blades. Disconnect the washing machine. Remove the laundry from the drum. Close the drum flaps and turn the drum a half revolution (photo **a**). Use a screwdriver to press on the plastic end while sliding the carriage from left to right (photo **b, c**) by hand until it falls into the drum. Open the drum and retrieve the object through the hole in the drum. Fit the blade back inside the drum: Position the plastic tip over the hole on the right side of the drum (photo **d**). Then slide the plastic blade from right to left until it engages. Close the drum flaps again, turn the drum a half revolution and check the position of the blade at all its anchorage points. Reconnect the washing machine.

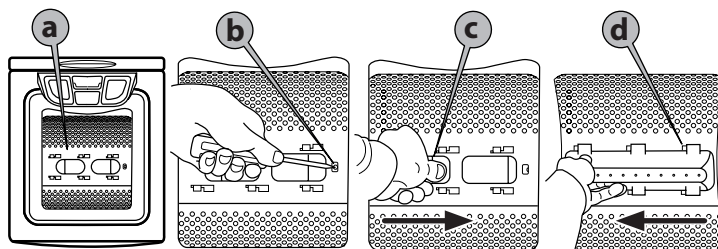

TRANSPORT AND MAINTENANCE

Disconnect the washing machine and shut off the water tap. Disconnect the water supply pipe from the tap and remove the drainage pipe from the drainage points. Remove any residual water from the pipes and washing machine and secure the pipes to avoid damage during transportation. To make it easier to move the machine, pull gently on the mobility level at the front of the bottom of the washing machine (if present) by hand. Pull the washing machine up to the stop using a foot. Then push the mobility level back into its original position. Reinstall the transport pallet. Follow the instructions on how to remove the transport pallet in the INSTALLATION GUIDE in reverse order.

TROUBLESHOOTING GUIDE

In some cases, the washing machine may not operate correctly for a number of reasons. Before calling the After-sales service, we recommend checking whether the problem can be easily resolved by consulting the following list.

Malfunctions:	Possible causes/ solutions:
The washing machine does not switch on and/or the programme does not start.	- It is not connected to the power socket or does not make contact properly. - There is a power failure. - The lid is not closed properly. - The washing machine switches off automatically before the start or at the end of a programme to save energy. To start the washing machine, first turn the knob to the "Off/0" position and then to the desired programme.
The wash cycle does not start.	- The "Start/Pause" button was not pressed. - The water supply tap is not open. - A "delayed start" was set.
The appliance stops during a programme and the "Start/Pause" indicator light starts flashing.	The programme has been modified - re-select the desired programme and press "Start/Pause".
The appliance vibrates.	- The washing machine is not level. - The transport pallet has not been removed; the transport pallet must be removed before using the washing machine.
The final spin gives poor results. The laundry is still very wet. The "Spin/drain" indicator light flashes, the spin speed on the display flashes or the spin speed indicator light flashes after the end of the programme - depending on the model	- The unevenness of the load of laundry during the spin deactivated the spin phase to avoid damage to the washing machine. This is why the laundry is still very wet. Unevenness may be due to: small loads of laundry (consisting of just a few large items or very absorbent items, such as towels) or large/heavy items. - Avoid small loads when possible. - The "Spin" key has been set to a low spin speed.
The machine displays a malfunction code (e.g. F-02, F-..) and/or the "Service"  indicator light comes on	- Switch the machine off, disconnect the power cord and wait approximately 1 minute before reconnecting. - If the problem persists, call the After-sales service.
The "Clean filter" indicator light comes on	- The waste water does not drain. - Clean the water filter.
The "Water supply off" indicator light comes on	The water supply to the appliance is shut off or is insufficient.



You can download the safety instructions, product data sheet and energy data:

- By visiting our website docs.bauknecht.eu
 - By using the QR code
 - Or by contacting our after-sales service (see telephone number in the warranty booklet). When you contact our After-Sales Service, you will be asked to provide the codes indicated on the appliance's identification plate.
- For information of repairs and maintenance, users should consult the website www.bauknecht.com
Scan the QT code on the energy label for model-specific information. This label also shows the model identifier number to be used when consulting the database portal at <https://eprel.ec.europa.eu>

