



**THANK YOU FOR BUYING A WHIRLPOOL PRODUCT.**  
In order to receive a more complete assistance, please register your appliance on: [www.whirlpool.eu/register](http://www.whirlpool.eu/register)


**PLEASE SCAN THE QR CODE ON YOUR APPLIANCE IN ORDER TO HAVE MORE DETAILED INFORMATION**



**Before using the appliance carefully read the Safety Instruction.**

## CONTROL PANEL

- |   |   |
|---|---|
| 1. On-Off / Reset button with indicator light       | 12. Salt refill indicator light                         |
| 2. Program selection button with indicator light    | 13. Power Clean® button with indicator light            |
| 3. Multifzone button with indicator light           | 14. Tablet (Tab) button with indicator light            |
| 4. Sani Rinse button with indicator light / Keylock | 15. Delay button with indicator light                   |
| 5. Eco program indicator light                      | 16. Start/Pause button with indicator light / Drain out |
| 6. Keylock indicator light                          |   |
| 7. Display  |   |
| 8. Program number and remaining time indicator      |   |
| 9. Tablet (Tab) indicator light                     |   |
| 10. Closed water tap indicator light                |   |
| 11. Rinse Aid refill indicator light                |   |

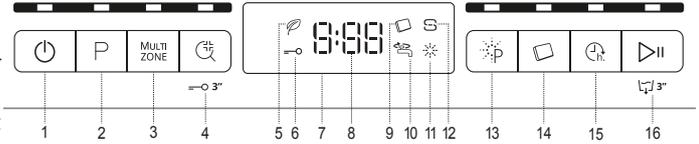


## FIRST TIME USE

### FILLING THE SALT RESERVOIR

The use of salt prevents the formation of LIMESCALE on the dishes and on the machine's functional components.

- It is mandatory that **the salt reservoir never be empty.**
- It is important to set the water hardness.

The salt reservoir is located in the lower part of the dishwasher and must be filled when the **SALT REFILL indicator light**  in the control panel is lit.

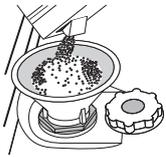


1. Remove the lower rack and unscrew the reservoir cap (anticlockwise).
2. Position the funnel (see figure) and fill the salt reservoir right up to its edge (approximately 1 kg); it is not unusual for a little water to leak out.
3. **Only the first time you do this: fill the salt reservoir with water.**

4. Remove the funnel and wipe any salt residue away from the opening. Make sure the cap is screwed on tightly, so that no detergent can get into the container during the wash program (this could damage the water softener beyond repair).

**Whenever you need to add salt, it is mandatory to complete the procedure before the beginning of the washing cycle to avoid corrosion.**

### FILLING THE RINSE AID DISPENSER

Rinse aid makes dish DRYING easier. The rinse aid dispenser **A** should be filled when the **RINSE AID REFILL** indicator light  in the control panel is lit. **NEVER pour the rinse aid directly into the appliance tub.**

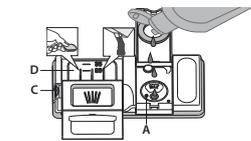

### FILLING THE DETERGENT DISPENSER

To open the detergent dispenser use the opening device **C**. Introduce the detergent into the dry dispenser **D** only. Place the amount of detergent for pre-washing directly inside the tub.

If all-in-one detergents are used, we recommend using the **TABLET** button, because it adjusts the program so that the best washing and drying results are always achieved.

**Usage of detergent not designed for dishwashers may cause malfunction or damage to the appliance.**

### WATER SOFTENING SYSTEM

Water softener automatically reduces water hardness, consequently preventing scale buildup on heater, contributing also to better cleaning efficiency. **This system regenerates itself with salt, therefore it is required to refill salt container when empty.**

Frequency of regeneration depends on water hardness level setting - regeneration takes place once per **6** Eco cycles with water hardness level set to **3**. Regeneration process starts in final rinse and finishes in drying phase, before cycle ends.

- Single regeneration consumes: ~3.5L of water;
- Takes up to 5 additional minutes for the cycle;
- Consumes below 0.005kWh of energy.

## PROGRAMS TABLE

Program	Programs description	Drying phase	Available options *)	Duration of wash program (h:min)**)	Water consumption (litres/cycle)	Energy consumption (kWh/cycle)
1. <b>Eco</b>	<b>Eco 50°</b> - Program is suitable to clean normally soiled tableware, that for this use, it is the most efficient programme in terms of its combined energy and water consumption, and that it is used to assess compliance with the EU Ecodesign legislation.	✓	MULTI ZONE     	4:00	9.0	0.76
2. <b>6<sup>th</sup> sense</b>	<b>6<sup>th</sup> Sense® 50°- 60°</b> - For normally soiled dishes with dried food residues. Senses the level of soiling on the dishes and adjusts the program accordingly.	✓	MULTI ZONE     	1:20 - 3:00	7.0 - 14.0	0.70 - 1.10
3. 	<b>Intensive 65°</b> - Program recommended for heavily soiled crockery, especially suitable for pans and saucepans.	✓	MULTI ZONE     	2:40	17.0	1.30
4. 	<b>Crystals 45°</b> - Program for delicate items, which are more sensitive to high temperatures, for example glasses and cups.	✓	MULTI ZONE   	1:40	12.0	1.00
5. 	<b>Rapid 30° 50°</b> - Program to be used for half load of lightly-soiled dishes with no dried food residues. Without drying.	-	MULTI ZONE   	0:30	9.0	0.50
6. 	<b>Prewash</b> - Use to refresh crockery planned to be washed later. No detergent to be used with this program.	-	MULTI ZONE  	0:10	4.5	0.01
7. 	<b>Self-Clean 65°</b> - Program to be used to perform maintenance of the dishwasher, to be carried out only when the dishwasher is EMPTY using specific detergents designed for dishwasher maintenance.	-		0:50	9.5	0.70

ECO program data is measured under laboratory conditions according to European Standard EN 60436:2020.

Note for Test Laboratories: For information on comparative EN testing conditions, please send an email to the following address: [dw\\_test\\_support@whirlpool.com](mailto:dw_test_support@whirlpool.com)  
Pre-treatment of the dishes is not needed before any of the programs.

\*) Not all options can be used simultaneously.

\*\*) Values given for programs other than the program Eco are indicative only. The actual time may vary depending on many factors such as temperature and pressure of the incoming water, room temperature, amount of detergent, quantity and type of load, load balancing, additional selected options and sensor calibration. The sensor calibration can increase program duration up to 20 min.

# OPTIONS AND FUNCTIONS

Please scan the QR code on your product in order to have more detailed information.

**OPTIONS can be selected directly by pressing the corresponding button (see CONTROL PANEL). If an option is not compatible with the selected program (see PROGRAMS TABLE), the corresponding LED flashes rapidly 3 times and beeps will sound. The option will not be enabled.**

**MULTIZONE** - If there are not many dishes to be washed, a half loading may be used in order to save water, electricity and detergent. By default the appliance washes dishes in all racks.

**KEYLOCK** - A long press (for 3 seconds) of SANI RINSE button, will activate the KEYLOCK function. To deactivate the KEYLOCK, long press again.

**POWER CLEAN** - Thanks to the additional power jets this option provides a more intensive and powerful wash in the lower rack, in the specific area. This option is recommended for washing pots and casseroles.

**SANI RINSE** - This option can be used to sanitize washed dishes. It will increase final rinse temperature and add antibacterial wash to the selected program.

**WARNING: the crockery and plates could be extremely hot at the end of the cycle.**

**TABLET (Tab)** - If you use powder or liquid detergent, this option should be off.


**DELAY** - The start of the program may be delayed for a period of time between **0:30** and **24** hours.

The DELAY function cannot be set once a wash cycle has been started.

## LOADING THE RACKS

CAPACITY: **10** standard place-settings


### CUTLERY RACK

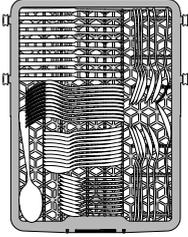

(loading example for the cutlery rack)

The third rack was designed to house the cutlery.


### UPPER RACK

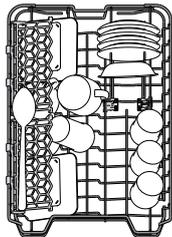


(loading example for the upper rack)

Load delicate and light dishes: glasses, cups, saucers, low salad bowls. The upper rack has tip-up supports which can be used in a vertical position when arranging tea/ dessert saucers or in a lower position to load bowls and food containers.

### FOLDABLE FLAPS WITH ADJUSTABLE POSITION

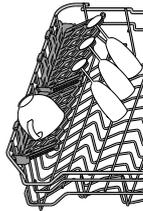

### LOWER RACK

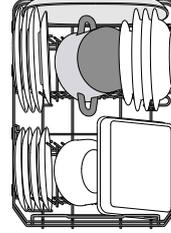


(loading example for the lower rack)

For pots, lids, plates, salad bowls, cutlery etc. Large plates and lids should ideally be placed at the sides to avoid interferences with the spray arm. The lower rack has tip-up supports which can be used in a vertical position when arranging plates or in a horizontal position (lower) to load pans and salad bowls easily.

### POWER CLEAN

Power Clean uses the special water jets in the rear of cavity to wash more intensively the high dirty items. The lower rack has a Space Zone, a special pull-out support in the rear of the rack that can be used to support frying pans or baking pans in upright position, thus taking up less space. Placing the pots/casseroles faced to the Power Clean® component please activate the POWER CLEAN on the panel.




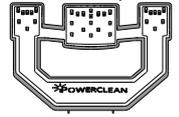


## CLEANING AND MAINTENANCE

More information in the Daily Reference Guide on the website.


### CLEANING THE FILTER ASSEMBLY

(loading example for the upper rack)

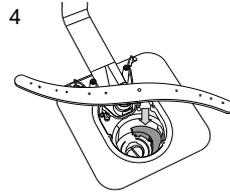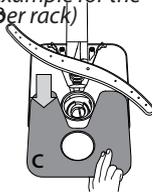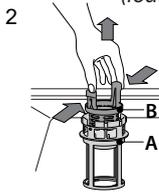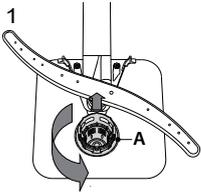


In case you find foreign objects (such as broken glass, porcelain, bones, fruit seeds etc.) **please remove them carefully. NEVER REMOVE** the wash-cycle pump protection (black detail) (Fig 4).

### CLEANING THE SPRAY ARMS

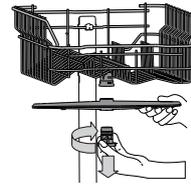

To remove the upper spray arm, turn the plastic locking ring in a clockwise direction.

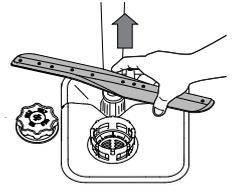

The lower spray arm may be removed by pulling it upwards.

## TROUBLESHOOTING

Please scan the QR code on your product in order to have more detailed information.

PROBLEMS	POSSIBLE CAUSES	SOLUTIONS
The dishwasher does not fill the water. Display shows: <b>F6</b> and <b>F6</b> , both On/Off and START/Pause LEDs are blinking rapidly.	No water in the water supply or the tap is closed.	Make sure there is water in the water supply or the tap running.
	The inlet hose is bent.	Make sure the inlet hose is not bent (see <i>INSTALLATION</i> ) reprogram the dishwasher and reboot.
	The sieve in the water inlet hose is clogged; it is necessary to clean it.	After having carried out the verification and cleaning, turn off and turn on the dishwasher and restart a new program.
Dishwasher finishes the cycle prematurely. Display shows: <b>F15</b> and both On/Off and START/Pause LEDs are blinking rapidly.	Drain hose positioned too low or siphoning into home sewage system.	Check if end of drain hose is placed at correct height (see <i>INSTALLATION</i> ). Check for siphoning into home sewage system, install air admittance valve if necessary.
	Air in water supply.	Check water supply for leaks or other issues letting air inside.

Policies, standard documentation, ordering of spare parts and additional product information can be found by:

- Using QR code on your product.
- Visiting our website [docs.whirlpool.eu](https://docs.whirlpool.eu) and [parts-selfservice.whirlpool.com](https://parts-selfservice.whirlpool.com)
- Alternatively, **contact our After-sales Service** (See phone number in the warranty booklet). When contacting our After-sales Service, please state the codes provided on your product's identification plate.

The model information can be retrieved using the QR-Code indicated on the energy label. The label also includes the model identifier that can be used to consult the <https://eprel.ec.europa.eu> database portal.

